
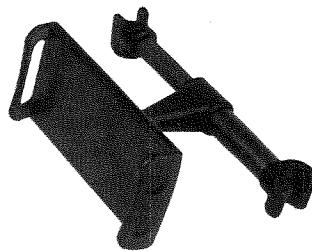


TROLLEY SPEAKER

MouKey®

MTs10-2

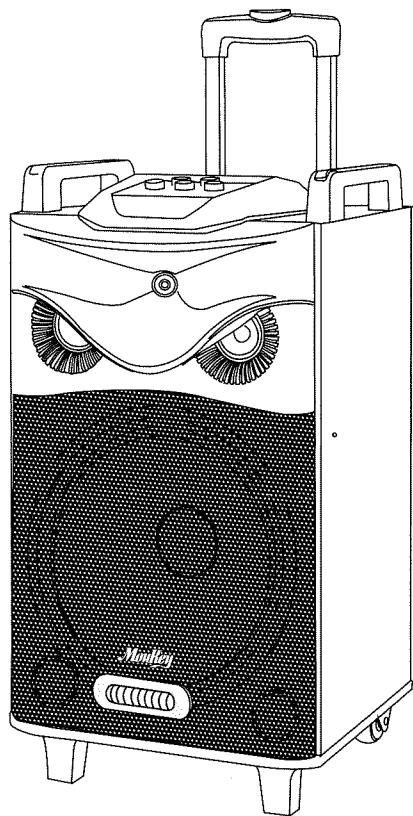

<https://www.donnerdeal.com>

 
To Customers

Welcome to purchase and use Moukey Digital Multimedia Trolley Speaker. To ensure that this speaker could bring you desired effects when using it, please read this instruction carefully.


This product can be connected to sound equipment such as PC, TV, CD, VCD, DVD, TUNER, TAPE, USB, SD card, etc. With outstanding sound quality, this trolley speaker is portable, multifunctional and perfectly-designed. We are confident that it will give you a completely new feeling.

Safety Instructions


To ensure safe use, please read this instruction carefully before using this product and use it in a right way according to the instruction. Please keep this instruction properly for future reference.



 
Power: The product can only work with power supply which is indicated in this instruction or specified in the product.




Mind Electricity Shock: Don't plug or unplug the power supply with wet hands to prevent the electricity shock.

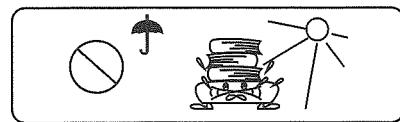


No Heavy Objects & Overheating: Do not place heavy objects on the product. It should avoid sun burning and keep away from hot source e.g. oven. No raining or immersion or put it in high temperature or moist conditions.

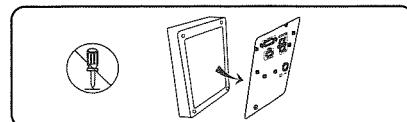


Rear Plate Dis-assembly: Please do not disassemble the rear plate. If repair is needed, please ask the professional to operate.

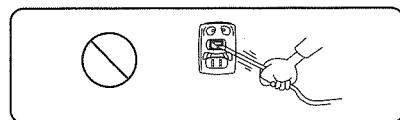

Power Line Protection: Power line should not be stepped, squeezed or dragged.

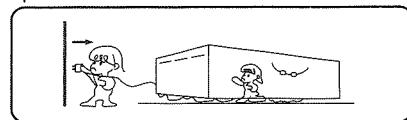


Non-use Period: If you do not use this product for a long time, please turn off the power and unplug the power supply.

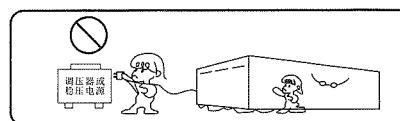

Don't use low power voltage regulating and regulated power supply: to avoid burning down the product or the regulated power supply.



This product is only suitable for use in places below 2000 meters above sea level. It may cause danger risk when it is used over 2000 meters above sea level.

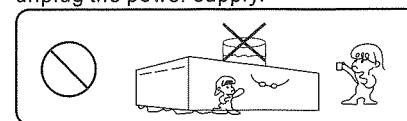

The Speaker Top: Don't place objects like vase or container filled with liquid. Please maintain air ventilation to dissipate heat.



This product is only suitable for use under non-tropical climate conditions. It may cause danger risk when it is used under tropical climate conditions.

Parameter & Data

1. Mobile Speaker System

High-powered PA speaker style

Wireless music media function

Multi-color automatic flashing LED party lights

Built-in rechargeable battery

FM radio with digital display screen

Aux (3.5mm) input

USB, TF flash card reader

1/4" microphone input

Battery energy LED indicator light

Solid and durable mold pressing cabinet design

Convenient rolling wheels and retractable handle

Suitable for indoor and outdoor party, crowd control, Karaoke

2. Wireless Streaming Media

Wireless streaming media

Simple and relaxing matching

Suitable for present newest devices like mobile phone, tablet, laptop and computer, etc.

Wireless range: 20 meters max

wireless connection name: Moukey MTs10-2

3. Package includes:

Speaker

Remote control, wireless microphone, power adapter, 3.5 AUX cable, instructions

4. Specifications:

RMS: 160W

Sound System: 10-inch Speaker, 3.5" Tweeters

Impedance: 4 Ohms

Frequency Response: 55-20kHz

S/N Ratio: 76dB+/-3dB

SPI: 94dB (1W/M)

T.H.D. : <2%

USB Type: 2.0

Digital Audio Document Support: Mp3

Max USB Flash Support: 32GB

Battery Life: 3 hours (Charging time: about 6 hours)

Battery of Remote Control: 1.5V AA battery x 2 (Not included)





Rechargeable Battery: 12V4.5V Lead-acid battery

Power:AC100-240V,50-60Hz,15V==2000MA adapte

Dimensions (L*W*H): 12.4" x 12.4" x 22.4"

Dimensions (L*W*H):367x367x626mm


Instructions for Function & Operation

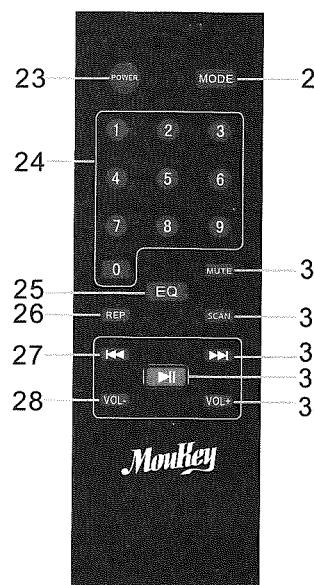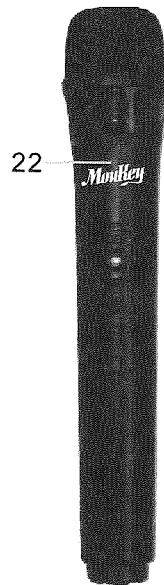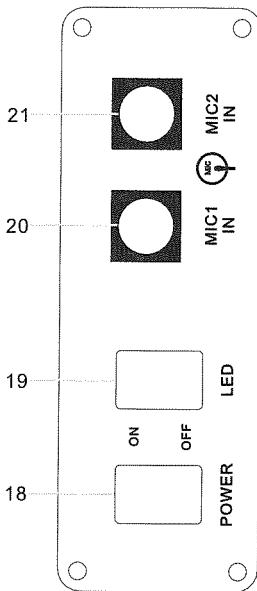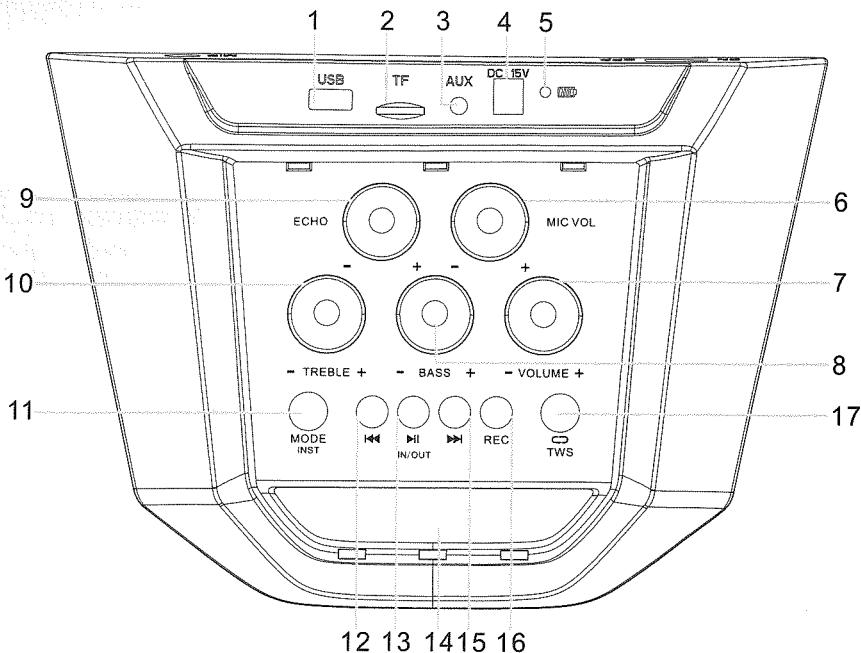

- 1.USB:USB input port (Up to 32gb)
- 2.TF:TF card input port (Up to 32gb)
- 3.AUX:Aux audio input (Use it when the type is "LINE")
- 4.DC 15 V:Charging socket
- 5.LED Light : Charging light indicator (Red light is charging, green light is full)
- 6.MIC VOL:Adjust microphone Volume
- 7.VOLUME:Adjust speaker Volume
- 8.BASS:Adjust music bass
- 9.ECHO:Adjust microphone echo
- 10.TREBLE:Adjust music treble
- 11.MODE:Mode conversion button: wireless connection, FM, AUX, three-mode conversion
(Press the button for a while to hide the original singer vocal and play an accompaniment when playing music, do it again to recover the original singer vocal.)
- 12.〈Previous:Previous song at music playing mode (Previous channel at FM mode)
- 13.〉Play/Pause the music (Automatic searching channel at FM mode)
- 14.LED display screen (respectively shows wireless connection,Line and FM mode)
- 15.〉Next song for music playing mode(Next channel at FM mode)
- 16.REC: When USB disk is inserted, press this button to record, and press it again to play
- 17.Repeat playback of U disk or SD card content/Bluetooth TWS function
(detailed introduction on the last page)
- 18.POWER: Main power switch ON / OFF
- 19.LED light ON/OFF
- 20.MIC1 IN: Wire microphone input 1
- 21.MIC2 IN: Wire microphone input 2
- 22.VHF wireless microphone
- 23.POWER: Main power switch ON / OFF
- 24.Press the number key to quickly select songs at USB disk playing mode
- 25.EQ:Press the EQ button to change the sound effect at USB disk playing mode
- 26.Repeat play at USB disk playing mode
- 27.Previous:Previous song at USB disk playing mode (Previous channel at FM mode)
- 28.VOL-: decrease volume
- 29.MODE:Mode conversion button: wireless connection, FM, AUX, three-mode conversion
(Press the button for a while to hide the original singer vocal and play an accompaniment when playing music, do it again to recover the original singer vocal.)
- 30.MUTE: Silent at USB disk playing mode
- 31.Press the scan key to automatically search channel at FM mode
32. Next song at USB disk playing mode(Next channel at FM mode)
- 33.Play/Pause the music (Automatic searching channel at FM mode)
- 34.VOL+: increase volume

Overlapping function operation

- 1.Aux input: Press the MODE button to turn to LINE mode and use the 3.5 mm audio cable provided by our company to receive external audio.
2.  At playing music mode, press the MODE button for a while to hide the original singer vocal, enabling you to enjoy singing. Press it again to recover singer's singing whenever you want.
- 3.Turn to FM mode, press the button  to automatically search FM channel, press this  to play the previous channel and press this  to play next channel
4.  At USB disk mode, press this button to have audio recordings with VHF microphone and press again to playback the record
5.  Press the button  at playing music mode to open the microphone(Microphone priority function: when playing the music and using the microphone at the same time, when microphone speaks the music will be automatically paused, resume the music playing after speaking finished. And press it for a while to close the microphone.)

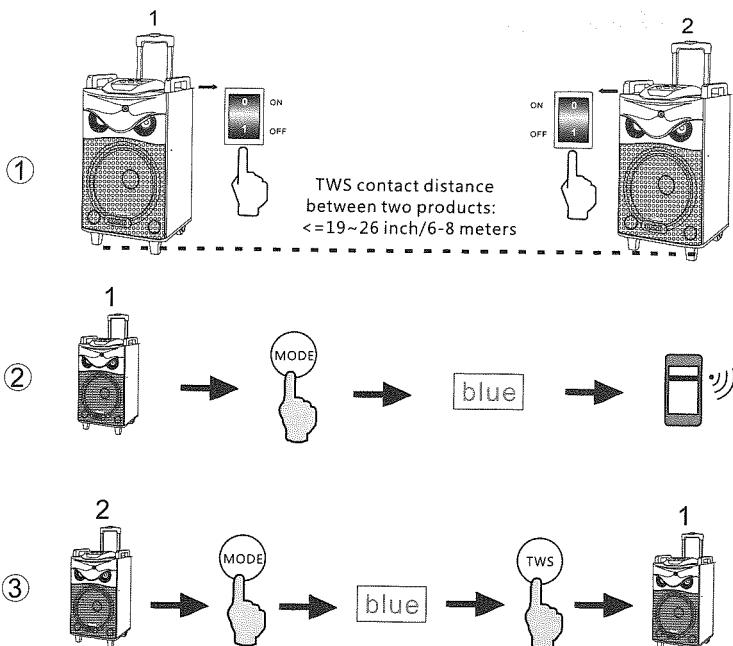

Detailed operation of serial Bluetooth TWS

*Must have two products of the same model

1: When the first product is switched to "BLUE" mode, when the Bluetooth connection to the mobile phone hears two beeps, it means the connection is successful, and the machine defaults to the host.

2: The second product switches to the "BLUE" mode, press and hold the "TWS" button for 2 seconds, after hearing the English prompt, TWS succeeds with the host, and the product defaults to the slave.

Exit Bluetooth TWS detailed operation

1: In the "BLUE" state, the master and slave press and hold the "TWS" button for 2 seconds to exit Bluetooth TWS.

Bluetooth TWS FAQ

1: After the TWS is successful, when playing the stereo sound source, the main and sub-units respectively interpret the left and right channels.

2: In TWS playback state: the volume and tone are independently controlled by the main and auxiliary computers; the previous song, the next song, play/pause functions, and the main and auxiliary computers at the same time. (Same for remote control)

3: Please exit TWS before the secondary machine is turned off, otherwise the machine will automatically reconnect after turning on the machine.



MODE Button

English

Press the MODE button, can select the working mode of the audio, 'BLUE' Bluetooth mode, 'FM' radio mode, 'LINE' external audio mode.

1. In the bluetooth state , please use the transmitting device (mobilephone/iPad, etc.) to search for the product Bluetooth name "Moukey MTs10-2" to complete the connection. If you encounter a Bluetooth connection failure, please close all the background programs of the phone and disconnect the connected Bluetooth device of the phone. After turning off the speaker, turn it on again and try to connect again.

 

2. In the FM state , press the play button to enter the station search mode. Wait for the search to complete, press forward or back to select the desired station. The FM frequency range of this product is 76~108Mhz, and the search process takes about 2 minutes. A total of 50 frequencies can be saved. After searching, you can use the remote control to quickly Choose the channel you want. Example: You need to search for a radio station with a frequency of 100.0. Press the number key 1000 on the remote control, and then it will jump quickly.

3. In the LINE state, the external audio needs to be used a 3.5mm TRS audio cable. Connect to the speaker to play the audio signal what you input



4. In Bluetooth, USB flash drive or TF playing music mode, long press this button. The screen displays, it will eliminate the original singer's voice function, and only retain the music mode. Then please long press this button and the screen displays to restore the original singer's singing function.



Every time you turn on, the music EQ mode, the default is IN (indoor mode)

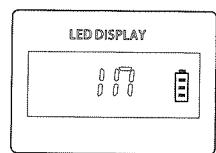

Long press IN to switch (indoor mode)

 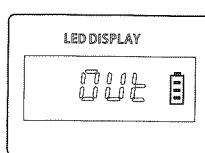

Long press IN to switch (outdoor mode)



REC function description:



Note: Recording notes, audio equipment can only recognize U disk or TF card below 32G, the USB or TF card for recording must have MP3 songs to record (If you insert a larger capacity U disk and TF, the system may not recognize the inserted device)

(Note: Background music cannot be recorded)

Recording function:

Short press the REC key to record, then short press to stop

recording, and play the just recorded file, (if there is an old recording file,

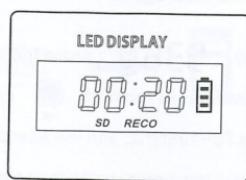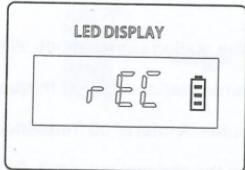

start recording

Recording in progress

it will automatically continue to play down other recording files, or MP3 songs.) (without MP3 content) USB or TF card, cannot record, please store an MP3 in USB or TF.)



Recording playback function:

If you have recorded multiple files, press the "up" next song" to select the recording to play, or short press the repeat button to play back a single recording, or you can repeat all the recordings.

Recording deletion function:

In the playback recording state, if you want to delete the playback recording file, long press the REC button to delete the

current playback recording

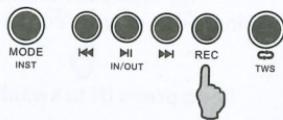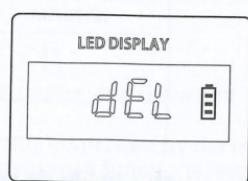

Long press to delete recording